


Short instructions

MixMate®

English (EN)

This document supplements the operating manual of the MixMate and does not replace it. Therefore, please also read the operating manual. You can find the current version on the Internet at www.eppendorf.com.

Overview of operating controls

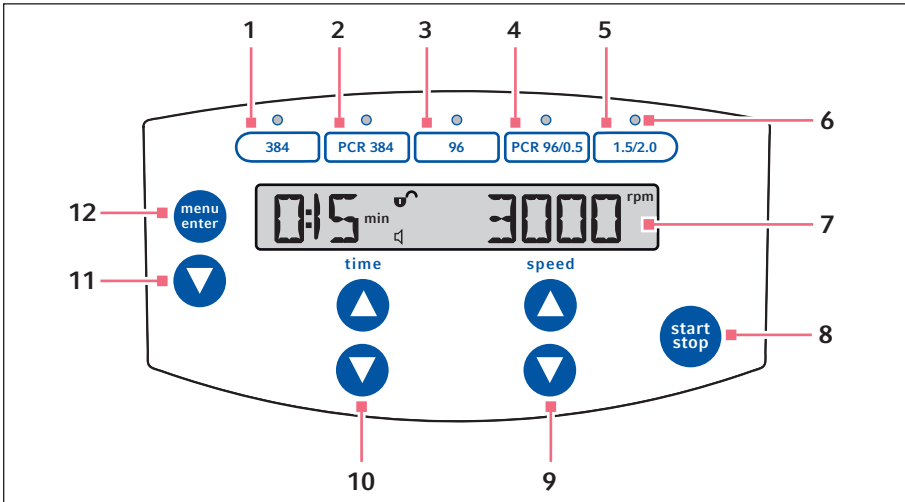

1 – 5 Softkeys

6 Control LED
Displays the selected softkey

7 Display

8 Key start/stop
Start/stop mixing

9 Arrow keys speed

Set the mixing frequency

10 Arrow keys time

Set the mixing time

11 Menu arrow key

Navigate in the menu

12 Key menu/enter

Call up and select menu parameters






Short instructions

MixMate®

English (EN)

Using pre-defined mixing parameters

The following parameters are assigned to the softkeys:

Softkey	Time	Speed	Tubes/plates	Filling level*
	15 s	2000 rpm	Microplates (384 wells) Deepwell plates (384 wells)	10 % – 60 %
	15 s	2600 rpm	PCR plates (384 wells)	10 % – 50 %
	30 s	1000 rpm	Microplates (96 wells)	5 % – 60 %
	30 s	1650 rpm	PCR plates (96 wells) Deepwell plates (96 wells) PCR tubes (0.2 mL) Micro test tubes (0.5 mL)	5 % – 50 %
	1 min	1400 rpm	Micro test tubes (1.5 mL, 2.0 mL)	5 % – 80 %

* Amount of maximum filling volume. Follow the manufacturer instructions.



- ▶ Always ensure that tubes, plates, and tube holders are properly located.
- ▶ Only use plates that conform to Microplate Standards ANSI/SLAS 1-2004 through ANSI/SLAS 4-2004.
- Maximum mixing frequency for deepwell plates and tube holders 0.5 mL, 1.5/2.0 mL, and PCR 96: 2000 rpm

Your local distributor: www.eppendorf.com/contact

Eppendorf AG · 22331 Hamburg · Germany

eppendorf@eppendorf.com · www.eppendorf.com